



Rotisserie Burner Replacement Instruction Manual

TOOLS REQUIRED:

Phillips Head Screwdriver (#2)



Pliers



Adjustable Wrench



www.mygrillparts.com

1



Turn the valve on the propane tank to the off position and disconnect the gas hose from the propane tank. Remove the warming rack and set it aside in a dry, safe place.

2



Remove the two screws to the right side of the rotisserie burner.

3



Remove the two screws to the left side of the rotisserie burner.

4



Remove the two screws on the back of the unit located above the rear baffle that correspond with the rotisserie burner heat shield mounting screws in the main bowl rear wall.

5



Remove the rotisserie burner heat shield from the unit now that the screws are removed. Set the part in a safe dry place.

6



Remove the two screws to the top of the burner. They correspond with the rear baffle on the back of the unit. Be prepared to support the baffle as they are the last screws.

7



Remove the rear baffle now that the screws have been taken out. Set the part in a safe dry place.

8



Remove the right screw of the rotisserie burner bracket that mounts the burner to the back of the unit.

9



Remove the left screw of the rotisserie burner bracket that mounts the burner to the back of the unit.

10




Go to the back of the unit and remove a single screw from the top of the bracket that secures the spider guard mesh screen over the rotisserie burner orifice.

11




Carefully open the spider mesh guard screen over the rotisserie burner orifice once the screw has been removed.

12

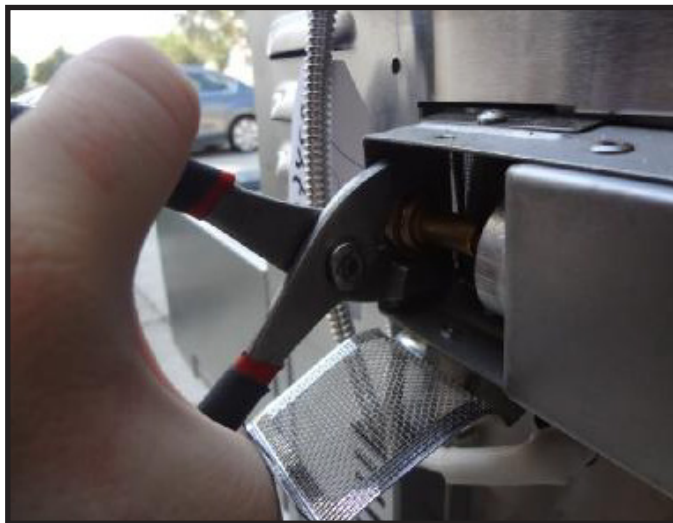

Using a wrench or pliers, turn the brass ring that mounts the brass elbow to the orifice of the grill.

13

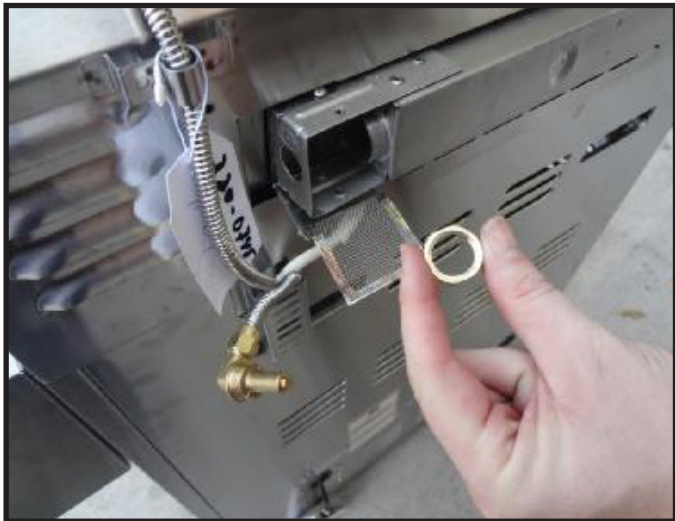

Remove the brass ring from the brass elbow, and pull the elbow from the hole where it is mounted to free the rotisserie burner.

14




Remove the rotisserie burner gas collector from both the right and left sides of the unit. They mount by using two screws on the bottom of the unit. You may need to remove the grilling grates.

15



Free the old Rotisserie burner from the unit by sliding the unit to the left slightly and then pulling the unit forward until it is freed.

16

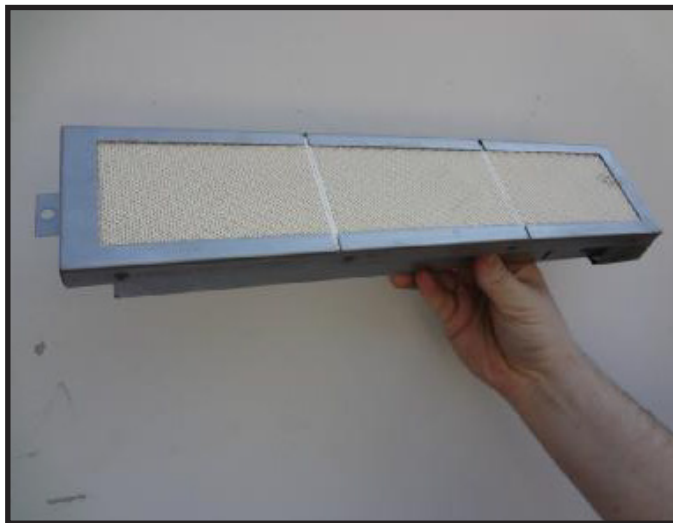

Take the new rotisserie burner from the packaging and prepare it by clearing any of the packaging or tape from the unit.

17



Remove the brass ring from the brass elbow, and pull the elbow from the hole where it is mounted to free the rotisserie burner.

18



Install the left screw into the bracket of the rotisserie burner as it was previously.

19



Reinstall the screw into the bracket of the rotisserie burner.

20




Mount the Rotisserie Brass Elbow into the burner and tighten the brass nut onto the thread. Tighten this nut with wrench to ensure the brass elbow is secure.

21



Replace the spider guard mesh screen back into position and reinstall the screw into the top to secure the mesh guard.

22

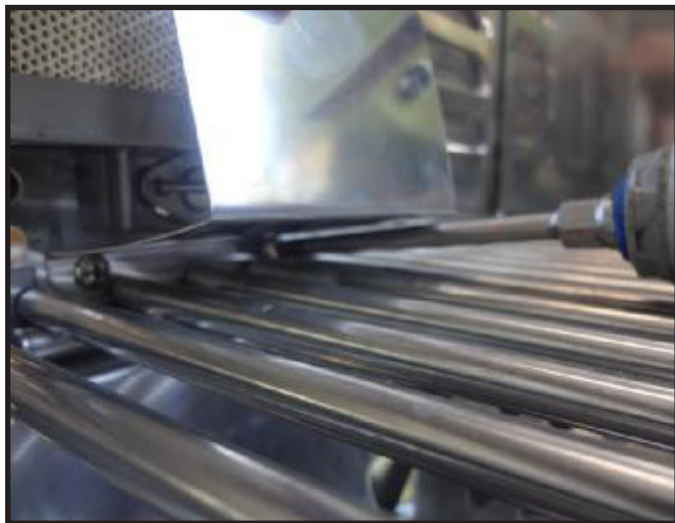

Reinstall the rotisserie burner gas collector. Two screws mount the bracket from the bottom.

23



Reinstall the rear baffle on the back of the unit. You may need a second set of hands to hold the baffle in place while the screws are installed during the next step.

24



Reinstall the screws that mount the rear baffle at the top by installing screws from the inside of the bowl assembly as shown.

25



Install the screws to the rear baffle on the right side by installing the screws from the inside of the bowl assembly as shown.

26



Install the screws to the rear baffle on the left side by installing the screws from the inside of the bowl assembly as shown.

27



Reinstall the rotisserie burner heat shield. You will need a second set of hands to hold the heat shield in place while the screws are reinstalled on the back of the unit.

28



Mount the screws as described on the previous step to the rotisserie burner heat shield.

29



Replace the warming rack in place and your new rotisserie burner should be ready to use.

The rotisserie burner should be operated for five (5) minutes after installation to ensure that it is working properly. Do not allow the unit to operate while unattended.

The ceramic surface of the burner should begin to glow an orange color as the surface heats up. Keep the main grill lid raised during operation and until the burner has cooled. It takes approximately fifteen (15) minutes for the burner to cool after it has been extinguished.

If you need further assistance, please call technical support at 800-913-8999.

