

Regulator Replacement Instruction Manual

PARTS REQUIRED: New Regulator



TOOLS/MATERIALS REQUIRED:

2 Adjustable Wrenches

Spray Bottle

Ammonia-Free Dish Soap







www.mygrillparts.com





3



Turn every burner control knob to the OFF position. This includes all main burner, side burner and rear burner (rotisserie) knobs.



Turn the propane tank gas valve clockwise to the OFF position.



Remove the regulator coupling nut from the propane tank by turning the coupling nut counter-clockwise.



Remove propane tank from grill.







5

7

Locate the opposite end of the regulator gas hose where the brass fitting connects to the manifold.

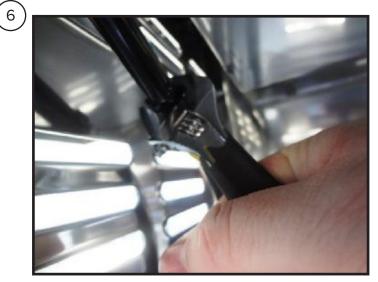

Using an adjustable wrench, disconnect the brass fitting by turning it counter-clockwise. Secure the manifold using another wrench, while disconnecting the brass fitting.

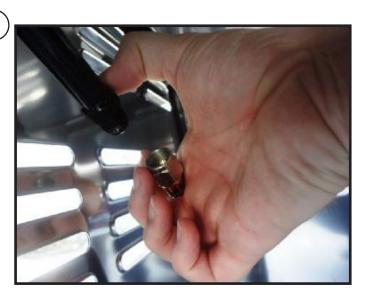


Dispose of the old regulator and gas hose.



Attach the new regulator gas hose by turning the brass fitting clockwise onto the manifold until it is hand-tight.



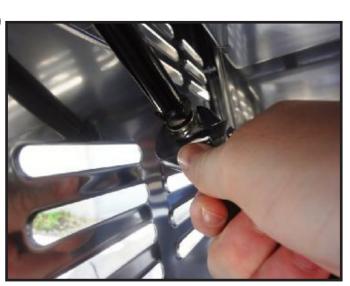

Using the two wrenches, tighten the brass fitting onto the manifold. Do not over-tighten the connection.



Place the propane tank into the opening in the propane tank compartment and re-attach the regulator coupling nut to the propane tank by turning it clockwise.



Prepare a 50/50 solution of water and ammonia-free dish detergent. Prepare the solution to be applied by using either a spray bottle or a brush.



Spray ammonia-free soapy water solution to the regulator hose and all relevant connection points.





Make sure to coat the entire length of the hose as well as both connection ends attached to the regulator and grill manifold.



To pressurize the line, open the propane tank gas valve by turning it counterclockwise until it will no longer turn.

15

If growing bubbles appear in the soapy water solution, the connections are not properly sealed. Check each fitting by tightening and recheck the seals by reapplying the soapy water solution.

A repair may require the replacement of parts. If you cannot repair the unit immediately by tightening the connections, turn off the propane gas tank and call technical support at 800-913-8999 for further assistance.

Do not use the grill while it has a leak in the gas system. It is unsafe for operation during this time. If no leak is discovered, you may move to the next step in this instruction manual.



Ignite the burners in accordance with the instructions in the Owner's Manual.